


8L MINI ELECTRIC OVEN INSTRUCTION MANUAL



T00801

* Before using your product for first time, please read this instruction manual.

PARTS OF APPLIANCE

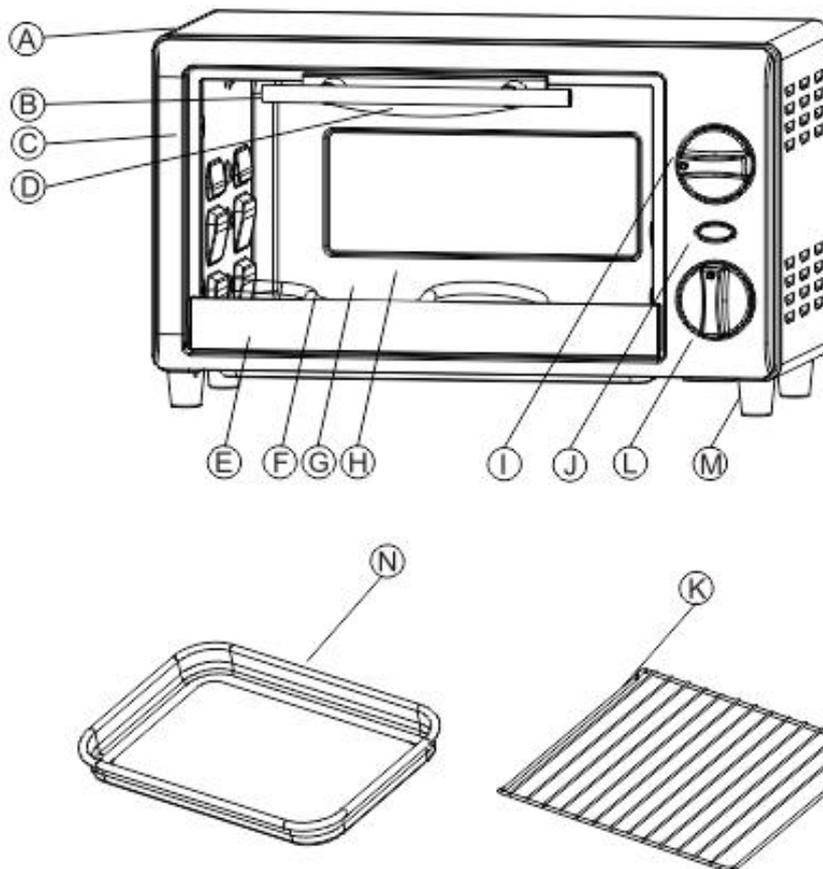

- A. Housing
- B. Door handle
- C. Front plate
- D. Upper door clip
- E. Lower door clip
- F. SS heating tubes
- G. Glass door
- H. Back board
- I. Temperature control knob
- J. Indicator light
- K. Wire rack
- L. Timer knob
- M. Foot
- N. Bake tray

SPECIFICATION

Model No. : TO0801

Power: 750 W


Voltage: 220-240V~ 50/60Hz

Capacity: 8L / 2 Slice


Product dimension: 13.5x9.4x8.2 in. (343x240x208 mm L*W*H)

HOW TO USE YOUR OVEN FOR BAKING AND GRILLING


1. Put the power cord in the socket

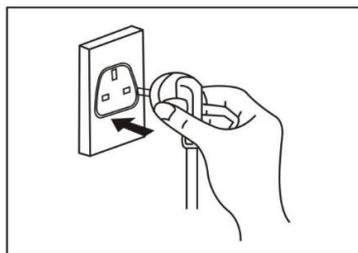


2. Pre-heat the oven with approximate 15 minutes

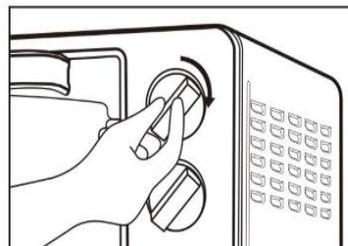


3. Put the food into oven

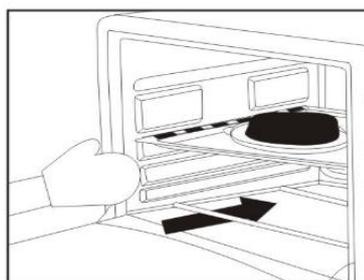


4. Set the timer and temperature

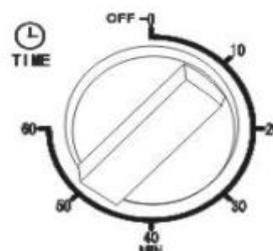

5. Take out the food when the process finished

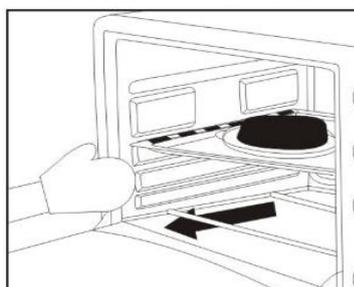

6. Unplug the power

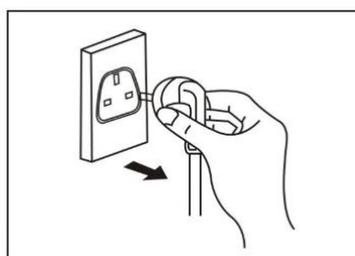

OPERATING INSTRUCTION

Before using your oven for the first time, be sure to:

1. Make sure that the oven is unplugged and the TIMER switch is on the OFF position.
2. Remove all rack and pans and wash them in hot sudsy water or in the dishwasher.
3. Thoroughly dry all accessories and re-assemble in oven. Plug the powder cord into socket and you are ready to use your new oven.
4. After re-assembling your oven, we recommend that you run in at the max temperature for approximately 15 minutes to eliminate any dirty oil on its surface.
5. The oven may emit smoke with first time use under normal operating conditions and will soon disappear after 5 minute.

CLEANING

1. It is important that you clean the appliance after each use to prevent an accumulation of grease and avoid unpleasant odors.
2. The appliance must be cool down and unplug from outlet before cleaning.
3. Do not immerse appliance in water or wash it under waterspout.
4. Removable wire rack and bake tray can be washed, as normal kitchen ware.
5. Clean outer surface of appliance with damp sponge.
6. Do not use abrasive cleaner or sharp utensils to clean the oven, as scratching may weaker it and cause shattering,
7. Let all parts and surfaces dry thoroughly prior to plugging oven in the socket.

IMPORTANT SAFEGUARDS

When using this electric oven, basic precautions should always be followed, included the followings:

1. Read all instructions.
2. Do not touch hot surface, operate only through handles and knobs.
3. Close supervision is necessary when any appliance is used by or near children.
4. To protect against electric shock, do not immerse cord, plug or any parts of the oven in water or other liquids.
5. Do not let cord hang over edge of table or counter, or touch hot surface.
6. Do not operate appliances with damaged cord or plug or after the appliance malfunctions, or have been damaged in any manner. Return the appliance to the nearest authorized service center of examination, repair, or adjustment.
7. The use of accessory attachments not recommended may cause hazard or injury.
8. Do not place on or near a hot gas or electric burner, or in a heated oven or in a microwave oven.
9. When operating the oven keep at least 4 inches of space on all sides of the oven to allow for adequate air circulation.
10. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning.
11. To disconnect, turn the control to OFF, then remove the plug. Always hold the plug, but never pull the cord.

12. Extreme cautions must be used when moving an appliance containing hot oil or other hot liquid.
13. Do not cover any parts of the oven with metal foil.
14. Be extreme cautions when remove the tray or disposing of hot grease or other hot liquid.
15. Do not clean with metal scouring pads pieces can break off the pad and touch electric parts, creating a risk of electric shock.
16. Never leave the appliances unattended while broiling or toasting.
17. Oversized foods and metal utensils must not be inserted in the oven as they may create a fire or risk of electric shock.
18. A fire may cause if oven is covered or touching inflammable material, including curtains draperies, walls and like, when on operation. Do not store any item on the oven during operation.
19. Extreme caution should be exercised when using containers constructed of anything other than metal or glass.
20. Do not place any of the following materials on the oven: cardboard, plastic, paper or anything similar.
21. Do not store any materials, other than recommended accessories in the oven.
22. Always wear protective, insulated oven gloves when inserting or removing any items from the hot oven.
23. This appliance is for HOUSEHOLD USE ONLY, do not use outdoor.
24. Do not use appliance for other than intended use.

WARNINGS:

1. Appliance is not intended to operate by means of an external timer or separate remote-control system.
2. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
3. Keep the appliance and its cord out of reach of children less than 8 years.