



## **WINE COOLER**


**MODEL: AXW130 / AXW210 / AXW310**



## **USER MANUAL**

# Table of Contents

Parts and Features-----	2
Important Safety Instructions-----	3
Installation Instructions-----	3
Before Using Your Wine Cooler-----	3
Installation of Your Wine Cooler-----	3
Reversing the Door Swing of Your Wine Cooler-----	4
Basic Operation-----	5
Tips For Refrigeration -----	5
Care and Maintenance-----	6
Cleaning Your Wine Cooler-----	6
Maintenance Your Wine Cooler -----	6
Vacation Time-----	6
Moving Your Wine Cooler-----	6
Troubleshooting -----	7
Technical Specifications -----	7

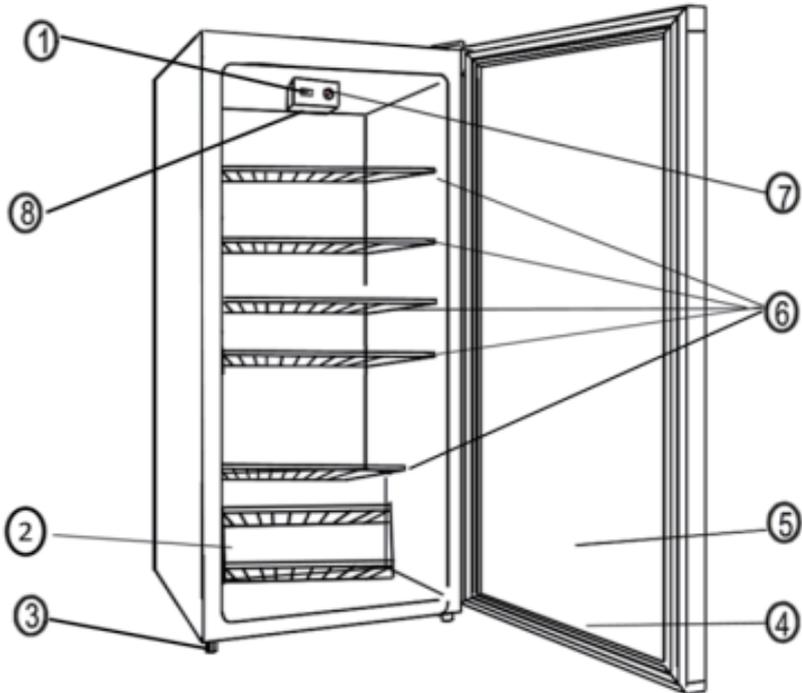

1. SWITCH OF INTERIAL LIGHT
2. BOTTOM BOTTLE SHELF
3. ADJUSTABLE LEG
4. DOOR SEAL
5. TRANSPARENT GLASS DOOR
6. BOTTLE SHELVES
7. THERMOSTAT
8. INTERIAL LIGHT

## **Important Safety Instructions**

- Read all instructions before using the appliance.
- Before you throw away your old wine cooler:  
take off the door, leave the shelves in place, so that children may not easily climb inside.
- Never allow children to operate, play with, or crawl inside the appliance.
- Never clean appliance parts with flammable fluids. The fumes can create a fire hazard or explosion.
- Do not store or use gasoline or any other flammable vapours and liquids in the vicinity of this or any other appliance. The fumes can create a fire or explosion.

## **INSTALLATION INSTRUCTIONS**

### **Before Using Your Wine Cooler**

- Remove the exterior and interior packing, including protective foam on door panels .
- Check to be sure the following parts are included:
  - 1 slide out shelves
  - 1 wine rack
  - 2 keys(optional)
  - 1 user manual
- Before connecting the appliance to the power source, let it stand upright for approximately 2 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- Clean the interior surface with lukewarm water using a soft cloth.

### **Installation of Your Wine Cooler**

- Place your appliance on a floor that is strong enough to support the appliance when it is fully loaded. To level your appliance, adjust the legs at the front of the appliance.
- Allow 5 inches of space between the back and sides of the appliance ,which allows the proper air circulation to cool the compressor.
- Locate the appliance away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the appliance not to perform properly.
- Avoid locating the appliance in moist areas. Too much moisture in the air will cause frost to form quickly on the evaporator.
- Plug the appliance into an exclusive properly installed-grounded wall outlet. Do not under any circumstances cut or remove the third (ground) prong from the power cord. Any questions concerning power and or grounding should be directed toward a certified electrician or an authorized products service center.

**Warning: Improper use of the grounded plug can result in the risk of electrical shock. If the power cord is damaged, have it replaced by an authorized products service center.**

## Reversing the Door Swing of Your Wine Cooler

This wine cooler has the capability of either opening the door from the left or right side. The unit is delivered to you with the door opening from the left side. Should you desire to reverse the opening direction, please follow these instructions.


### NOTE:

**Before Reversing the door ,the power must be shut off.**

**All parts removed must be saved to do the reinstallation of the door.**


This wine cellar has been built with the door hinges on the right. If you wish to change the opening direction, follow the instructions below:

1. Remove the upper hinge cover(6) first
2. Remove the two screws (1) that hold the upper hinge (5) (right side) to the frame. Take away the upper hinge (5).
3. Lift the door and place it on a padded surface to prevent scratching it.
4. Remove the two screws(8) that hold the lower hinge(2) and Make sure to Remove the lower hinge(2).
5. Remove the left front leg (4) and transfer it to the right side.
6. Remove the hole cover plate(7) to the right side.
7. Before placing this lower hinge(2), remove the bolt-pin (9) and reverse the direction of the lower hinge(2). Then install the lower hinge (2) onto the left side of the lower frame with two screws (8).
8. Insert the bolt-pin(9) to the lower hinge (2).
9. Set the door to its place making sure the door seat at the lower hinge(2)
10. While holding the door in the closed position secure the upper hinge (5) in the top frame of left side with two screws (1). Please remember that do not tighten the two screws(1) until the top of the door is levelled with the counter top.
11. Install the upper hinge cover(6) on the upper hinge..

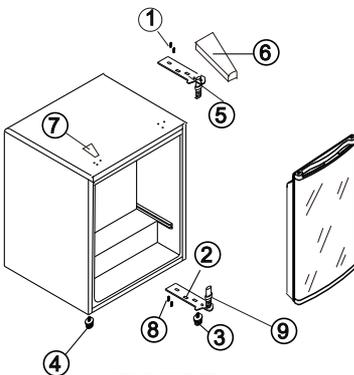

**FIGURE 1**

Door opening from left side

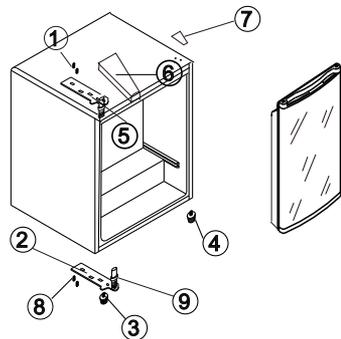

**FIGURE 2**

Door opening from right side

## IMPORTANT SAFEGUARDS

Do not store food in wine cooler, as interior temperature may not get cool enough to prevent spoilage. As a natural result of condensation, in summer months or area of high humidity, the glass door may built up moisture on the outside .Just wipe it away.


## BASIC OPERATION

Your wine cellar must stand on an even surface.

If the appliance is to be placed on carpet, support it with a wooden board underneath. Be aware that placing the appliance on carpet may mean that heat from the compressor may cause the carpet to fade.

## To operate

1. Clean the inner compartment.
2. Plug in your wine cellar.
3. The first time you turn the unit on, set the temperature control to the max.
4. After 20 minutes, adjust the temperature control setting to normal This setting should be correct for home or office use.
5. To turn your wine cellar off, turn the temperature control to min

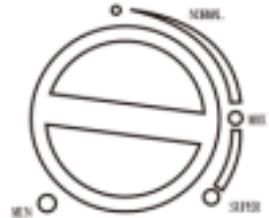

## Tips for refrigeration

Adjust the internal temperature according to the amount of product and the ambient temperature.

Winter (5-10°C/41-50°F) — Setting 1-2

Spring and Autumn (10-15°C/50-59°F) — Setting 2-4

Summer (15-30°C/59-86°F) — Setting 4-5

The inner temperature varies in different parts of the chiller. The back of the chiller is coldest.

### Door Lock:

For safety and security ,your unit is equipped with a door and key. Door will not lock until the key is moved. This eliminates the risk of accidental child entrapment. Two keys are included with your lock.

**Warning: To help prevent child entrapment keep the key out of reach of children and away from cabinet.**

Notes:

**There is a 4 to 6 °C variance between the top and bottom shelves of the wine chiller. Therefore, if you have set the wine chiller for red wine only and you want to place a mix of white and red wines, you should place the white wine bottles on the bottom shelves and the red wines on the top shelves.**

## **CARE AND MAINTENANCE**

### **Cleaning Your Wine Cooler**

- Unplug the wine cooler, and remove the bottles.
- Wash the inside with a warm water and baking soda solution. The solution should be about 2 tablespoons of baking soda to a quart of water.
- Wash the shelves and trays with a mild detergent solution.
- The outside of the wine cooler should be cleaned with mild detergent and warm water.
- It may also be necessary to periodically wipe the bottom part of the storage area, as the wine cooler is designed to retain humidity, and condensation may collect there.

### **Maintenance of Your Wine Cooler**

- Power Failure  
Most power failures are corrected within a few hours and should not affect the temperature of your wine cooler if you minimize the number of times the door is opened. If the power is going to be off for a longer period of time, you need to take the proper steps to protect your contents.

### **Vacation Time**

During long absences, remove all the bottles; unplug your wine cooler, clean your wine cooler, and leave the door open slightly to avoid possible formation of condensation, mold, or odors.

### **Moving Your Wine Cooler**

- Remove all the bottles.
- Securely tape down all loose items inside your wine cooler.
- Turn the levelling screws up to the base to avoid damage.
- Tape the doors shut.
- Be sure the wine cooler stays in the upright position during transportation.

## Troubleshooting

You can solve many common wine cooler problems easily, saving you the cost of a possible service call. Try the suggestions below to see if you can solve the problem before calling the servicer.

### TROUBLESHOOTING GUIDE

PROBLEM	POSSIBLE CAUSE
Wine cooler does not operate.	Not plugged in. The circuit breaker tripped or blown fuse.
Wine cooler is not cold enough.	Check to be sure the temperature control setting. External environment may require a higher setting. The door is opened too often. The door is not closed completely. The door gasket does not seal properly. The wine cooler does not have the correct clearances.
Compressor turns on and off frequently	The room temperature is hotter than normal. A large amount of contents has been added to the wine cooler.  The door is opened too often. The door is not closed completely. The temperature control is not set correctly. The door gasket does not seal properly. The wine cooler does not have the correct clearances.
Vibrations.	Check to assure that the wine cooler is level.
The wine cooler seems to make too much noise.	The rattling noise may come from the flow of the refrigerant, which is normal. As each cycle ends, you may hear gurgling sounds caused by the flow of refrigerant in your wine cooler. Contraction and expansion of the inside walls may cause popping and crackling noises. The wine cooler is not level.
The door will not close properly.	The wine cooler is not level. The doors were reversed and not properly installed. The gasket is dirty. The shelves are out of position.

### **Technical specifications:**

For detailed specifications, please refer to the nameplate at the back of the wine cellar. The specifications are subject to change without prior notice due to products improvement.

**Adela Nordic AB**  
**Svedplan Industripark**  
**Brobackavagen 19**  
**44191 Alingsas**  
**SWEDEN**  
**info@adexanordic.se**